

INSTALLATION INSTRUCTIONS

Outdoor Thermostat Field Installation for Heat Pumps

IMPORTANT SAFETY INFORMATION

INSTALLER: Please read all instructions before servicing this equipment. Pay attention to all safety warnings and any other special notes highlighted in the manual. Safety markings are used frequently throughout this manual to designate a degree or level of seriousness and should not be ignored. **WARNING** indicates a potentially hazardous situation that if not avoided, could result in personal injury or death.

WARNING:

ELECTRICAL SHOCK, FIRE OR EXPLOSION HAZARD

Failure to follow safety warnings exactly could result in serious injury or property damage.

Improper servicing could result in dangerous operation, serious injury, death or property damage.


- Before servicing, disconnect all electrical power to the unit.
- When servicing controls, label all wires prior to disconnecting. Reconnect wires correctly.
- Verify proper operation after servicing.

THERMOSTAT INSTALLATION


The instructions listed below describe how to properly install the outdoor thermostat for packaged unit heat pump applications as required by HUD. See Figure 1.

NOTE: Please refer to the installation instructions supplied with the unit and the branding kit for proper wiring of the outdoor thermostat. Some wiring and quick connect terminals needed to install the outdoor thermostat are field supplied. Thermostat terminal designations may vary.

The opening temperature for the outdoor thermostat is $45^{\circ}\text{F} \pm 5^{\circ}\text{F}$ and the closing temperature is $30^{\circ}\text{F} \pm 6^{\circ}\text{F}$.

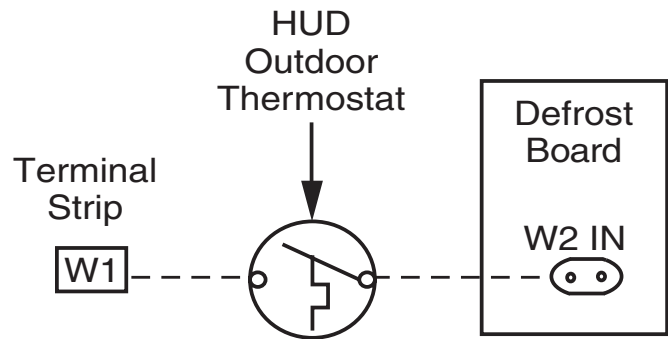

14 SEER Large Package Heat Pump

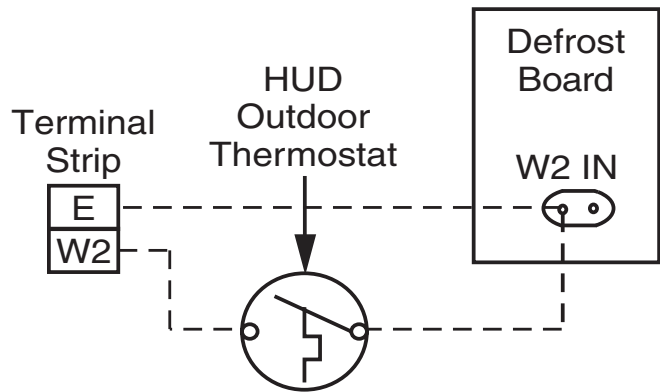

16 SEER Small Package Heat Pump

Figure 1. Thermostat Hookup

