

WIRING DIAGRAM

SMALL PACKAGED HEAT PUMP - SINGLE PHASE


208/230 VOLT

60HZ

NOTES:

- 1. Disconnect all power before servicing.
- 2. For supply connections use copper conductors only.
- 3. Not suitable on systems that exceed 150V to ground.
- 4. For replacement wires use conductors suitable for 105°C.

- 1. Couper le courant avant de faire letretine.
- 2. Employez uniquement des conducteurs en cuiver.
- 3. Ne convient pas aux installations de plus de 150V a la terre.

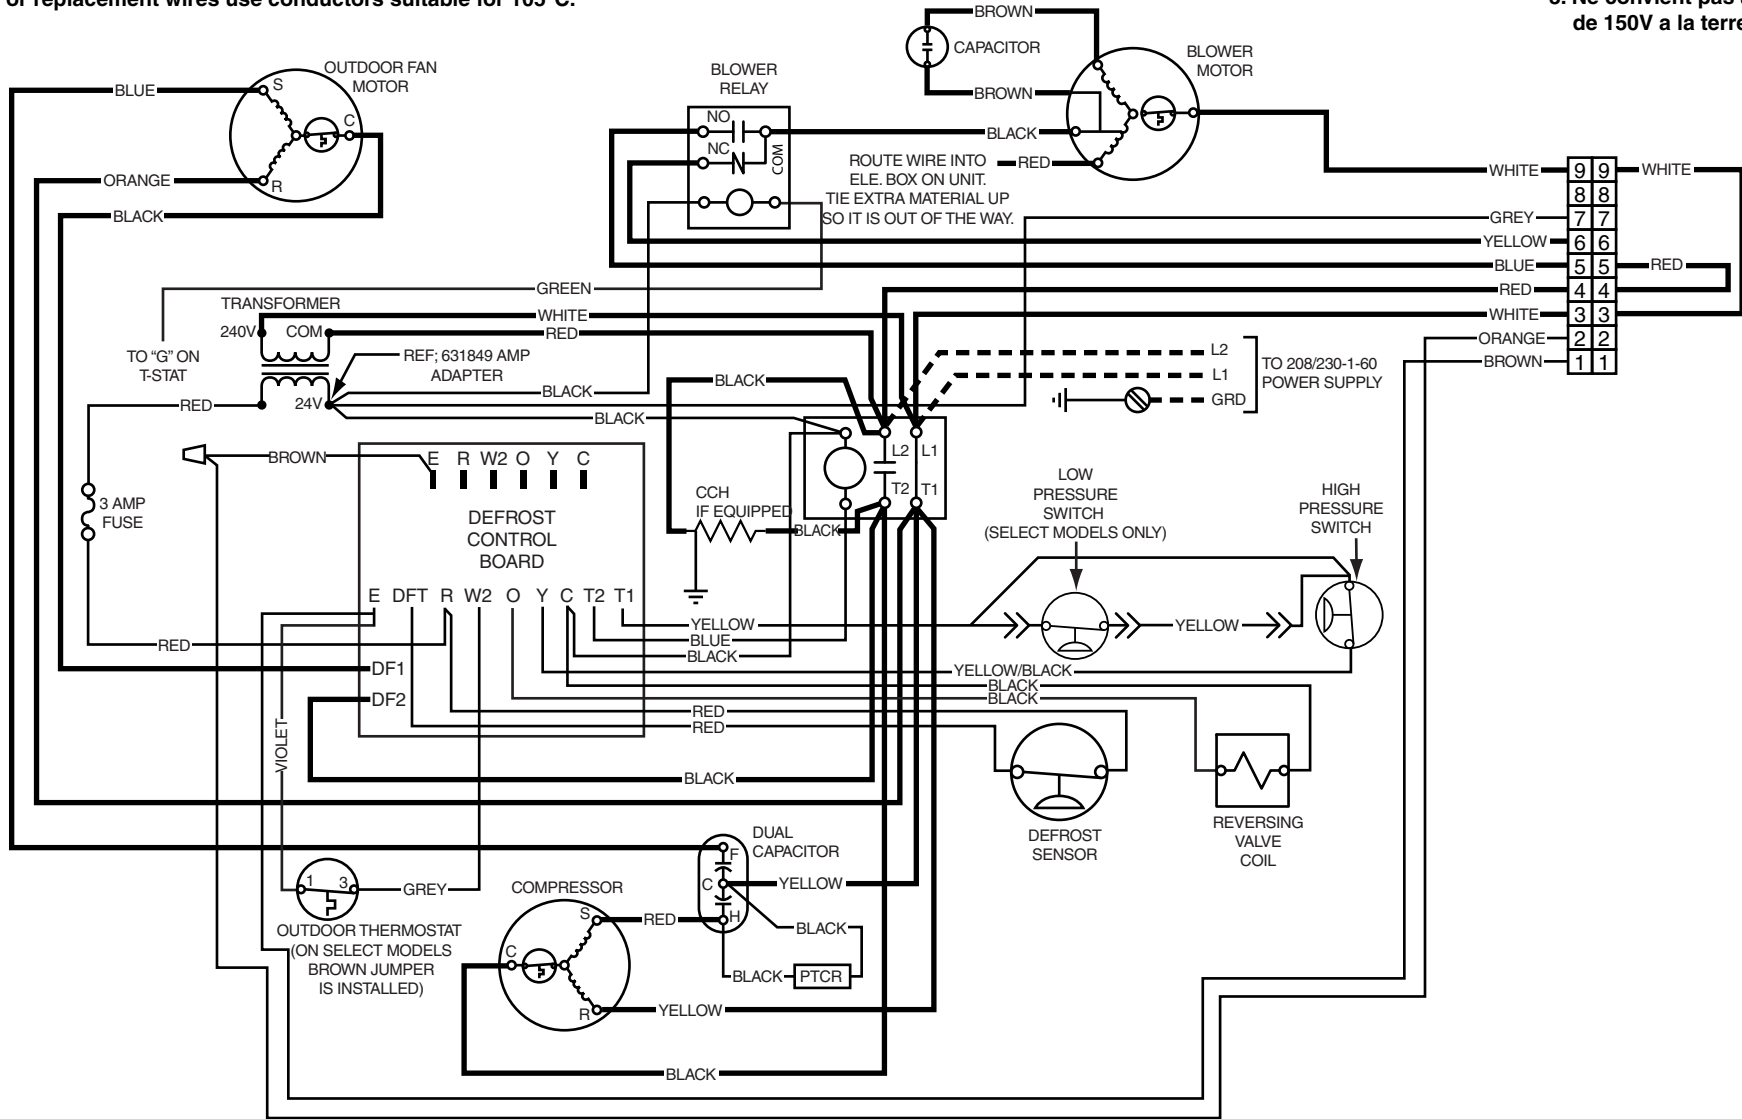

LEGEND:

- FIELD WIRING - - - - -
- LOW VOLTAGE ————
- HIGH VOLTAGE —————



7111810

0811