

# QUICK REFERENCE DATA

## FS4BG Series Residential Split System Air Conditioner

20 SEER


MODEL NUMBER:		FS4BG-024K	FS4BG-036K	FS4BG-048K	FS4BG-060K	
<b>ELECTRICAL DATA</b>	Volts-Cycles-Phase <sup>(1)</sup>	208/230-60-1				
	Total Amps	11.9	17.3	18.9	28.8	
	Delay Fuse Max. <sup>(2)</sup>	20	35	35	60	
	Min. Circuit Ampacity	14.2	21	23	35.1	
	Field Control Wiring Connections (24 vac from thermostat/indoor side)	R, C, Y1, Y2				
<b>CONDENSER DATA</b>	Coil	Area (ft <sup>2</sup> )	13.3	20.4	24.8	24.8
		Rows - FPI	1-23	1-18	1-23	1-23
		Tube	MC	MC	MC	MC
	Fan Motor	Type	Brushless DC			
		Amps	2.6	2.6	2.6	3.8
		HP	1/3	1/3	1/3	1/2
	Compressor Data	RLA	9.3	14.7	16.3	25
		LRA	N/A	N/A	N/A	N/A
	Service Valves	Liquid Side	3/8"	3/8"	3/8"	3/8"
		Vapor Side	3/4"	7/8"	7/8"	7/8"
<b>Installation Refrigerant Vapor Line Size</b> (All liquid lines 3/8" OD)	0 - 24 ft. equiv.	3/4"	7/8"	7/8"	7/8"	
	25 - 39 ft. equiv.	3/4"	7/8"	1-1/8"	1-1/8"	
	40 - 75 ft. equiv.	7/8"	1-1/8"	1-1/8"	1-1/8"	
	75 - 100 ft. equiv.	1-1/8"	1-1/8"	1-1/8"	1-1/8"	
Refrigerant Type		R-410A				
Refrigerant Charge (oz.), 15 ft. line set (factory charge)		78 <sup>(3)</sup>	93 <sup>(3)</sup>	110 <sup>(3)</sup>	123 <sup>(3)</sup>	
Weight Approximate (lbs.)	As shipped	149	197	225	240	
	Net	136	178	205	220	

- (1) Operating Voltage Range: 187v min. — 253v max.  
 (2) HACR Type Circuit Breakers may be used.  
 (3) Additional charge required for line sets above 15 feet. Values based on vapor line as follows with 3/8" liquid line.  
 (a) 3/4" = 0.6 oz. per additional foot.  
 (b) 7/8" = 0.7 oz. per additional foot.  
 (c) 1 1/8" = 0.8 oz. per additional foot.


**Table 1. Electrical Specifications & Physical Data**

WIRE GAUGE	RECOMMENDED MAXIMUM WIRE LENGTH (FT) FROM UNIT TO THERMOSTAT
22	45
20	70
18	115
16	180

**Table 2. Control Wiring (24V)**

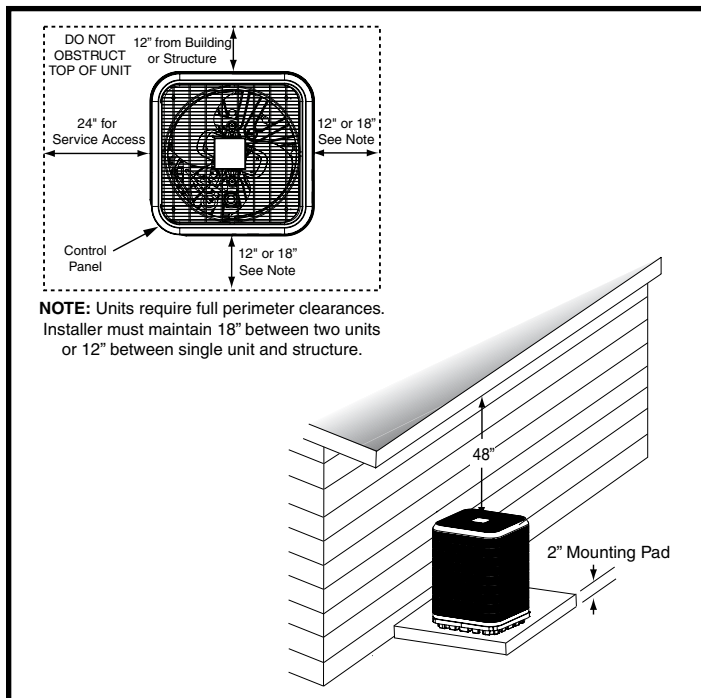

**Figure 1. Clearance Requirements**

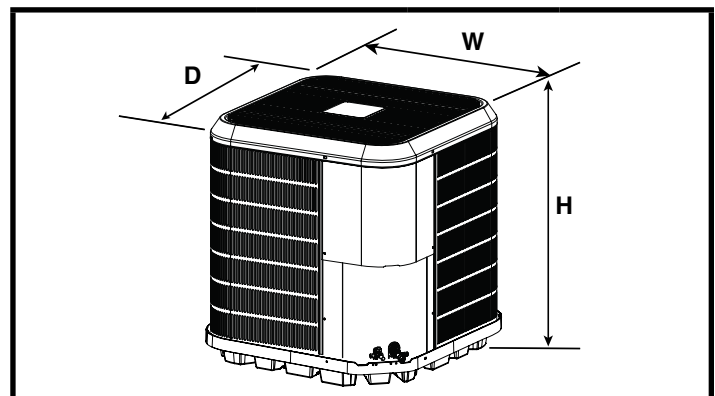

MODEL NUMBER	HEIGHT (H)	WIDTH (W)	DEPTH (D)
FS4BG-024K	37"	22 1/2"	22 1/2"
FS4BG-036K	37"	30 1/2"	30 1/2"
FS4BG-048K	45"	30 1/2"	30 1/2"
FS4BG-060K	45"	30 1/2"	30 1/2"

**Table 3. Unit Dimensions**

**Instructions:**

1. Find the column for the model of outdoor unit that is being installed.
2. Find the row for the model of the indoor unit that is being installed.
3. Find the cell in the table in which this row and column meet. In this cell the appropriate TXV and charge addition for this match are listed.

MODEL NUMBER:		FS4BG-024K	FS4BG-036K	FS4BG-048K	FS4BG-060K
OUTDOOR UNIT FACTORY CHARGE (OZ.):		78	93	110	123
MODELS	INDOOR COIL TXV (AS-BUILT)	REQUIRED INDOOR TXV OR TXV KIT CHARGE ADDITION (OZ) / RATED CFM (4)			
<b>B6VM</b>					
B6VMMX24K-B	669564	669564 (0 / 810)	--	--	--
B6VMMX36K-B	669566	--	669566 (0 / 1050)	--	--
B6VMMX48K-C	669568	--	--	669568 (0 / 1480)	--
B6VMMX60K-C	669578	--	--	--	669578 (0 / 1675)
<b>C7</b>					
C7B(A,H)MX24(C,U)-B	669681	669681 (0 / 810)	--	--	--
C7B(A,H)MX36(C,U)-B	669683	--	669683 (0 / 1050)	--	--
C7B(A,H)MX36(C,U)-C	669683	--	669683 (0 / 1050)	--	--
C7B(A,H)MX48(C,U)-C	669852	--	--	669852 (0 / 1480)	--
C7B(A,H)MX48(C,U)-D	669852	--	--	669852 (0 / 1480)	--
C7B(A,H)MX60(C,U)-C	669686	--	--	--	669686 (0 / 1675)
C7B(A,H)MX60(C,U)-D	669686	--	--	--	669686 (0 / 1675)

**NOTES:**

<sup>(4)</sup> Charge addition is for coil change only. For line sets longer than 15 feet see Installation Instructions.  
CFM refers to blower flow at rating point. Refer to indoor unit air flow setting information in the Installation Instructions for that unit.

**Table 4. TXV / Charge Addition (Oz)**

